

PHILIPS MAGNAVOX

OWNER'S MANUAL (USE AND SET-UP GUIDE)

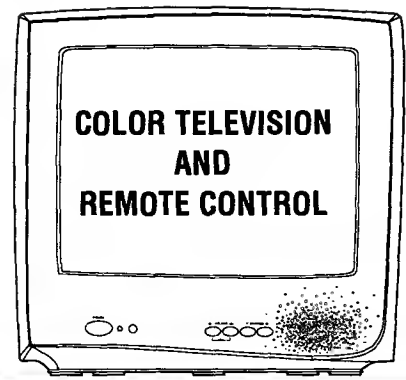 


TABLE OF CONTENTS

Getting Started

Warning/Precautions	1, 8
Hooking Up Your TV	2
VCR to TV Antenna Connections	2
Basic TV and Remote Control Operation	3
How to Use the First Time Set-Up	4

On-Screen Features

✧ Using the TV Volume Control	5
✧ Using the TV Volume Limit Control (available on select models only)	5
✧ Setting the TV Sleep Timer Control	6
✧ Using the TV Wake Up Control	6
✧ Using the TV Picture and Color Controls	7
✧ How to Set the TV for Closed Captioning	7

General Information

Tips if Something Isn't Working	8
Index	8
Warranty	8

NOTE: This owner's manual is used with several different television models. Not all features (and drawings) discussed in this manual will necessarily match those found with your television set. This is normal and does not require you contacting your dealer or requesting service.

For Customer Use

Enter (below) the Serial Number and the Model Number of this television (located on the rear of the TV cabinet).

Retain this information for future reference.

Model No. _____

Serial No. _____

FEATURES

- **First Time Set Up** which automatically sets the TV for local channels and the correct picture signal (antenna or cable).
- **Infrared Remote Control** which works your TV as well as all on-screen feature controls.
- **Standard Broadcast (VHF/UHF) or Cable TV (CATV)** channel capability.
- **Closed Captioning** which allows the viewer to read TV program dialogue or voice conversations as on-screen text.
- **Automatic Programming of Channels** for quick and easy selection of favorite stations available in your area.
- **Sleep-Timer** which automatically turns the TV OFF at preset times.
- **Language** control allows the user to select from three options; English, Spanish or French. This controls the On-Screen Menu text only. (Does not work for Closed Captioning.)

Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

Once your PHILIPS MAGNAVOX purchase is registered, you're eligible to receive all the privileges of owning a PHILIPS MAGNAVOX product. So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your PHILIPS MAGNAVOX warranty.

Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Congratulations on your purchase, and welcome to the "family!"

PHILIPS MAGNAVOX

Dear PHILIPS MAGNAVOX product owner:

Thank you for your confidence in PHILIPS MAGNAVOX. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS MAGNAVOX "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

And most importantly you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome—and thanks for investing in a PHILIPS MAGNAVOX product.

Sincerely,

Robert Minkhorst
President and Chief Executive Officer

P.S. Remember, to get the most from your PHILIPS MAGNAVOX product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!



Know these safety symbols



⚡ This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

⚠ The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

ATTENTION: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

PHILIPS MAGNAVOX

Visit our World Wide Web Site at <http://www.philipsmagnavox.com>

HOOKING UP YOUR TV (ANTENNA/CABLE TV CONNECTIONS)

CABLE TV

CABLE INPUT/CONVERTER

 
Your Cable TV input into your home may be a single (75 ohm) cable, or a Converter Box installation. In either case the connection to the TV is very easy. Just put the threaded end of the cable signal to the TV's antenna plug and screw it down tight.

BEGIN

1 If your Cable TV signal is a single round cable (75 ohm) then you're ready to connect to the TV.
If you have a Cable TV Converter Box: Connect the Cable TV signal to the Cable Signal IN(put) plug on the Converter.

2 Connect the Cable TV cable to the ANTENNA/CABLE plug on the TV.
If you have a Cable TV Converter Box: Connect the OUT(put) plug from the Converter to the ANTENNA/CABLE plug on the TV.

NOTE: The connecting cable for the Converter is supplied from the Cable TV Company.

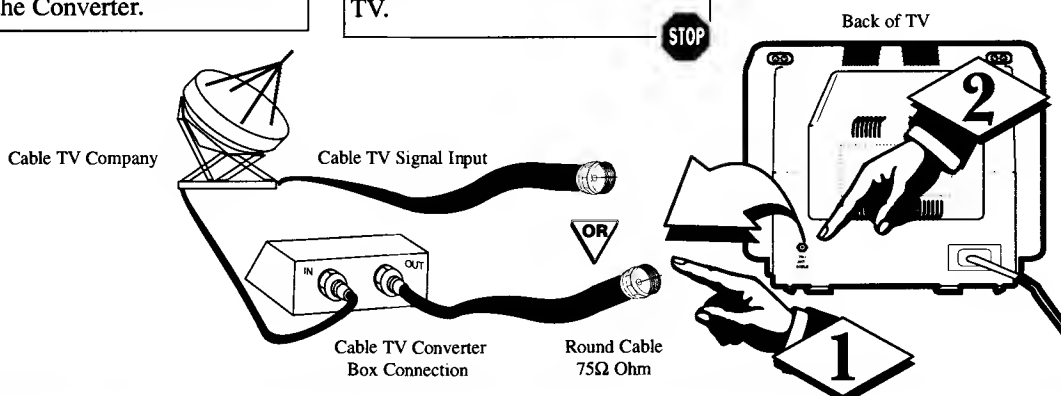

SMART HELP

Remember, set the TV for the type signal you've just connected (see page 3 of this Set-Up Guide.)

To select only the channel numbers on your Cable system see "Auto Program" (page 3). If you use a Cable Converter box, set the TV to the same channel as the converter's CH 3/4 switch (on the rear of the converter.)

ANTENNA

 
COMBINATION UHF/VHF

A combination antenna receives normal broadcast channels (VHF 2-13 and UHF 14-69). Your connection is easy since there is only one 75Ω (ohm) antenna plug on the back of your TV - and that's where the antenna goes.

BEGIN

1 If your antenna has a round cable (75 ohm) on the end, then you're ready to connect it to the TV.
If your antenna has flat twin-lead wire (300 ohm), you first need to attach the antenna wires to the screws on a 300 to 75 ohm adapter.

2 Push the round end of the adapter (or antenna) onto the ANTENNA/CABLE plug on the rear of the TV. If the round end of the antenna wire is threaded, screw it down tight.

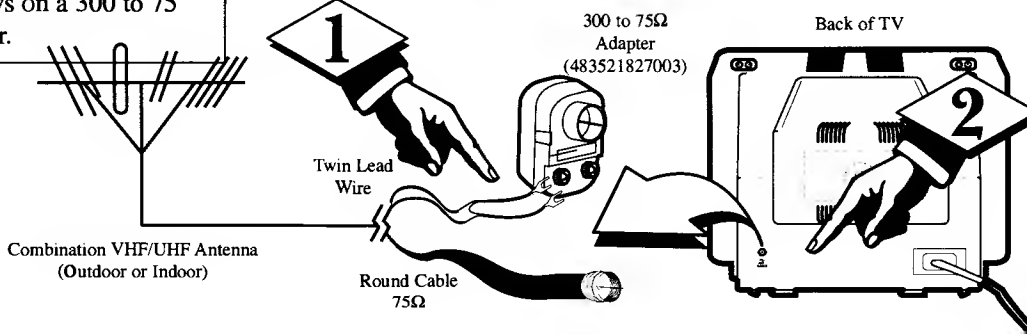

SMART HELP

Remember, be sure to set the TV for the type signal you've connected (see page 3 of this Set-Up Guide.)

To set the TV to select only the channel numbers in your area see how to "Program" or "Add" channels in memory on page 3.

To order any optional accessory contact your dealer or call the toll-free accessory ordering number (1-800-292-6066):

- UHF/VHF Combiner: (SBV1133AO1)
 - 75-300 Ohm Adapter: (SBV1113AO1)
 - 300-75 Ohm Adapter: (483521827003)
 - Quick "F-type" Extender: (M61026)
- For recessed ANTI/CABLE connections.

SEPARATE UHF/VHF


Some of you may have two separate antennas. One antenna is for VHF channels (2-13) and the other antenna is for UHF channels (14-69).

For homes with separate UHF/VHF antennas, you will need an optional "combiner" before you can connect to the TV. See the "Smart Help" section (to the right on this page) for ordering details.

BEGIN

1 Attach the separate UHF and VHF antennas to the correct screws on the combiner.

 2 Push the round end of the combiner onto the ANTENNA/CABLE plug on the rear of the TV.

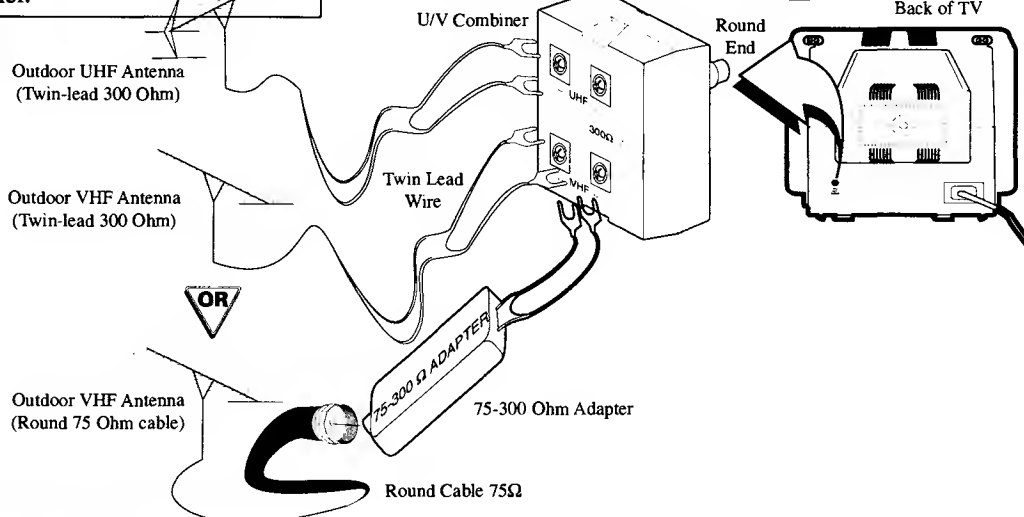

VCR TO TV

BASIC CONNECTION

 
The basic Antenna, or Cable TV, to VCR to TV connection is shown to the right. For more information on other hookups (possible when Cable Converter/Descrambler boxes are included) refer to your accessory VCR and Cable Converter Owner's Manual for details.

BEGIN

1 Connect your Antenna or Cable TV signal to the IN FROM ANT(enna) plug on the VCR.

2 Connect the OUT TO TV plug on the VCR to the ANTENNA plug on the TV (connecting cable supplied with the VCR.)

3 Refer to the Owner's Manual included with your VCR for other possible connections and TV/VCR operating details.

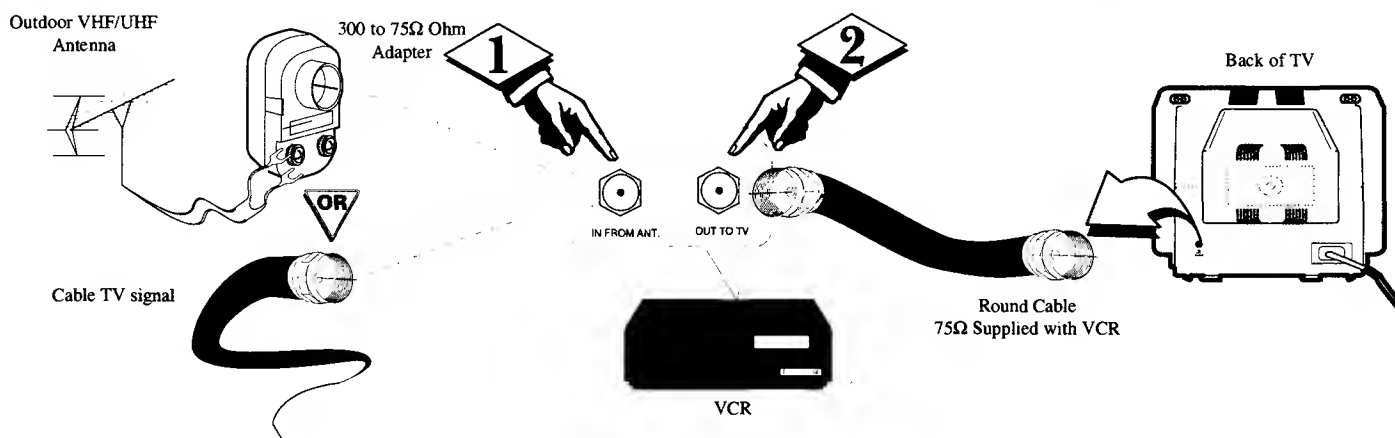

HOW TO USE AND SETUP YOUR TV FOR THE FIRST TIME

TELEVISION

 
BEGIN

1 Press the **POWER** button to turn the TV ON.


2 Press the **VOLUME UP** (▲) or **DOWN** (▼) button to adjust the sound level.

3 Press the **CHANNEL UP** (▲) or **DOWN** (▼) button to select TV channels.

STOP

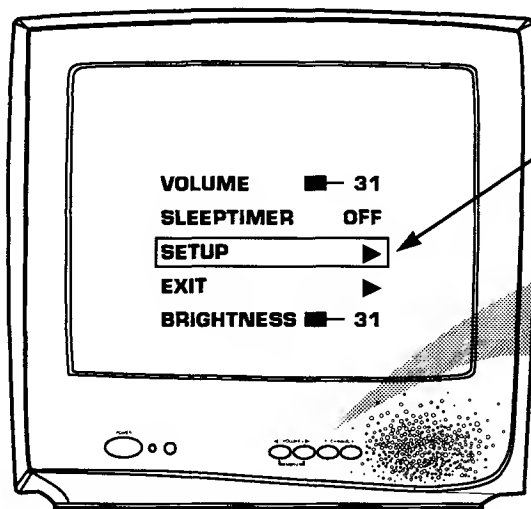

 The SETUP on-screen control is automatically selected when you first plug in your TV and press the MENU button (on the TV or remote.)

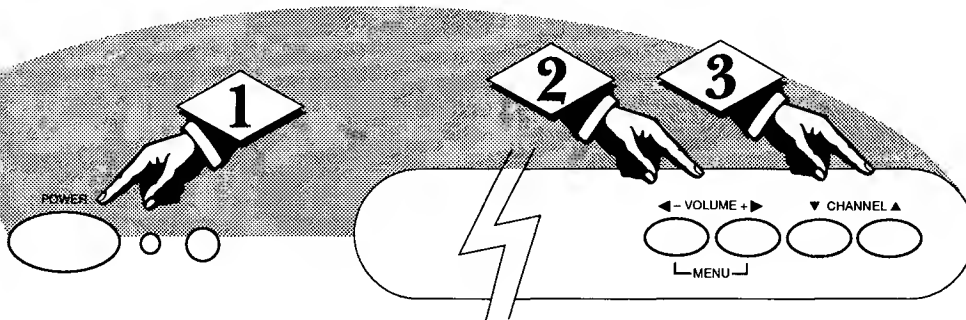

SMART HELP

Remember, you can press any button on the front of the TV to turn the TV ON. The tuned channel number will always briefly appear when the TV is first turned ON (and with channel changes.) You can also press the STATUS button (on the remote) to see what channel the TV is ON.

REMOTE

BEGIN

 
 
1 Point the remote control toward the remote sensor window on the TV when operating the TV with the remote.

STOP

To load the supplied batteries into the remote:

1. Remove the battery compartment lid on the back of the remote.
2. Place the batteries (2-AAA) in the remote. Be sure the (+) and (-) ends of the batteries line up correctly (inside of case is marked.)
3. Reattach the battery lid.

Battery Lid

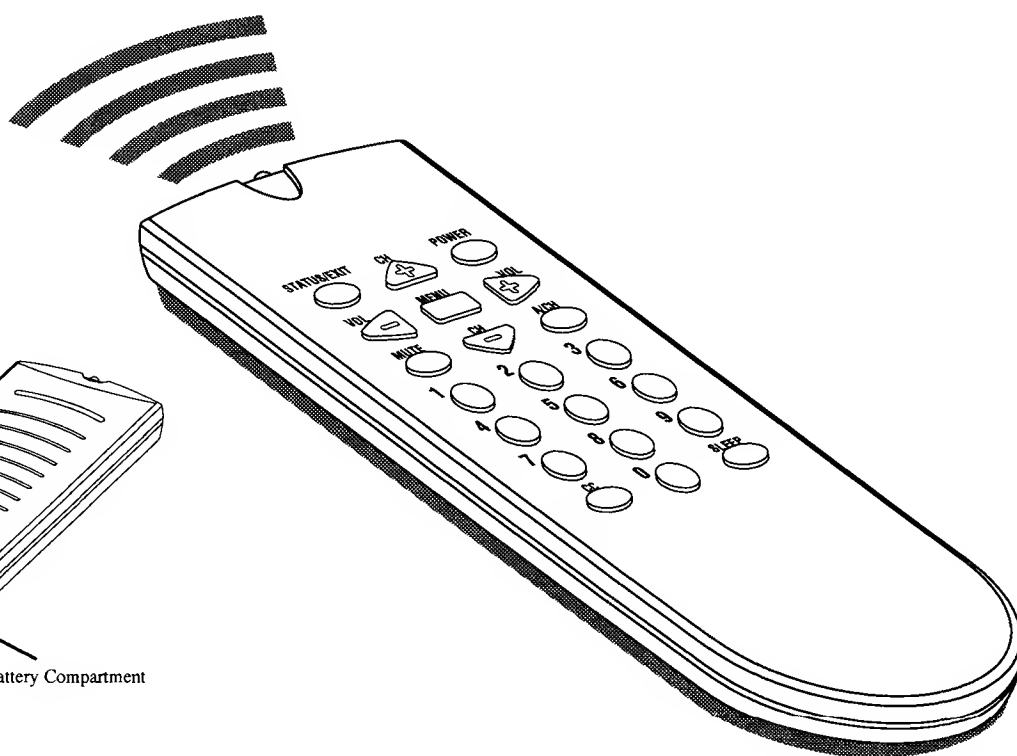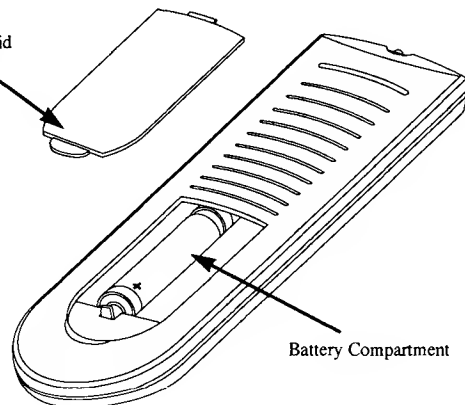

Channel Scan Button

Press to scan up or down through channel numbers. (Also can be used with the MENU button to select on-screen controls. With the Menu displayed, press Channel (+) or (-) buttons to scroll through the list of controls.)

Status/Exit Button

Press to see the current channel number on the TV screen. Also press this button to clear the TV screen after control adjustments.

Menu Buttons

 
Press the MENU button to show on-screen controls. Press Channel (+) or (-) buttons to move through the list of controls. Press the Volume (+) or (-) buttons to adjust the MENU controls.

Mute Button

Press to turn the TV sound OFF. Press again to return the sound to its previous level.

CC Button

Press to select the Closed Captioning mode. Choose either CC-MUTE, CAPTION 1 (CC-1), CAPTION 2 (CC-2), or OFF (CC-OFF).

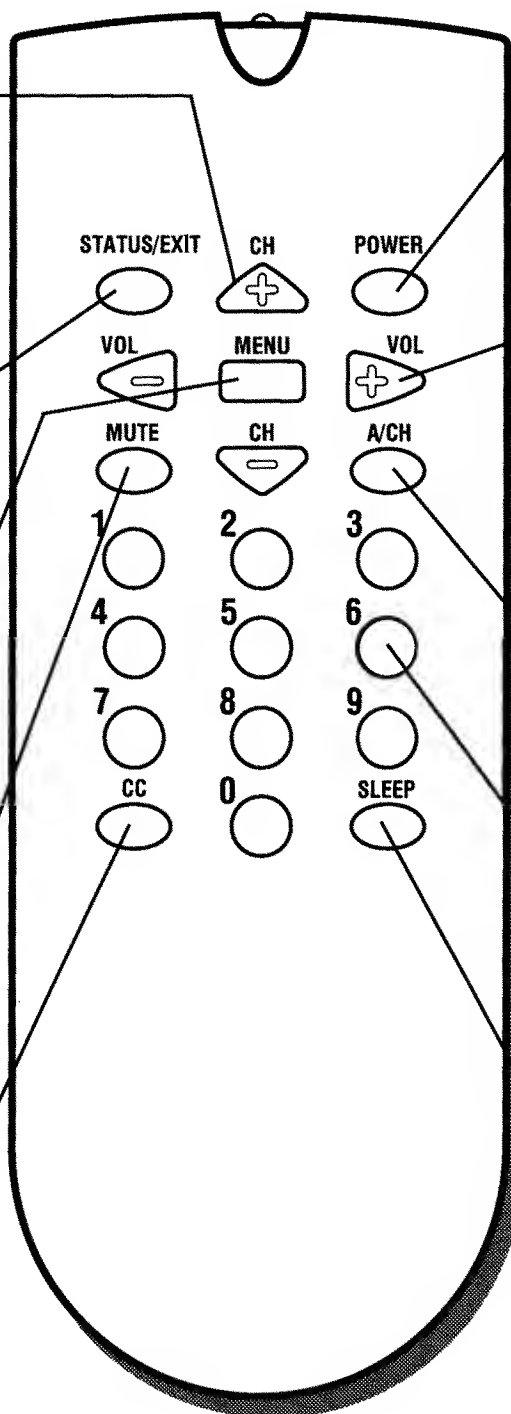

Power Button

Press to turn TV ON and OFF.

Volume (-) and (+) Buttons

Press to adjust the TV sound level. When used with the MENU button, press to adjust the selected on-screen (MENU) feature controls.

A/CH Button

Press to toggle between current and previously viewed channel.

Number Buttons

Press two number buttons to select TV channels. For example: to select channel 6... press "0" first; then "6".

Sleep Button

Press to set the TV to automatically turn itself OFF. See page 6, SLEEPTIMER control for details.

SETUP OF YOUR TELEVISION FOR THE FIRST TIME

SETUP MENU

AUTOMATIC SETTINGS

First Time Setup takes care of some basic TV control settings for you. Follow the steps in this section to quickly add area channel numbers into the TV's memory, set the Language, and the TV for Antenna or Cable signal.

BEGIN

1 Press MENU button on the remote. An on-screen list of features appears on the TV screen.

2 Press the CH (+) or (-) buttons on the remote to scroll the on-screen menu until the word **SETUP** appears within the highlight box.

3 Press the VOL (+) button to access the **SETUP** on-screen menu. Then, press the CH (+) or (-) buttons to scroll the **SETUP** options. Next press the VOL (+) or (-) buttons as directed to use the selected menu items.

 
4 Press the **STATUS/EXIT** button on the remote to clear the screen after an adjustment, or scroll to the "EXIT" option in the **SETUP** screen and press the VOL (+) button to bring you back to the main on-screen menu. You can also just wait and after a minute the **MENU** will drop automatically from the screen.

STOP


SMART HELP

Press the remote's **STATUS/EXIT** button (or use "EXIT") to back out of the **SETUP** menu.


Remember, **SETUP** is a first-use, one-time operation and will not have to be repeated (even if the TV is unplugged.)

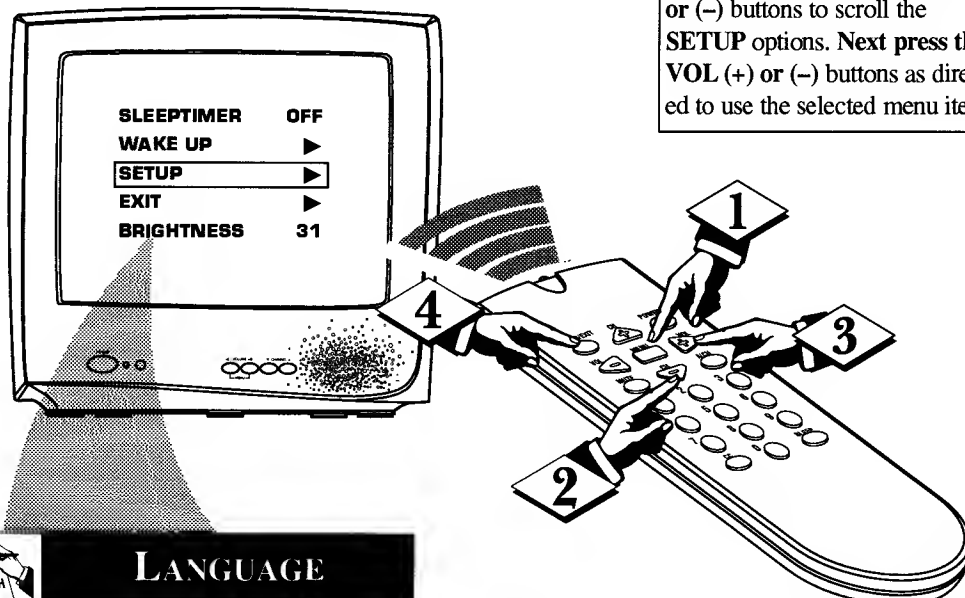


LANGUAGE

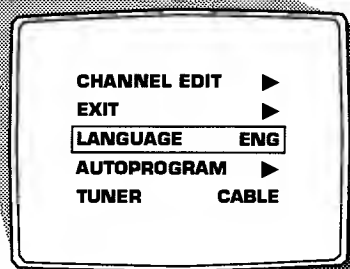 

OR

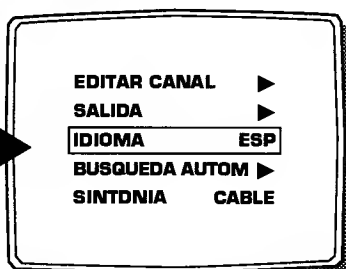 


OR

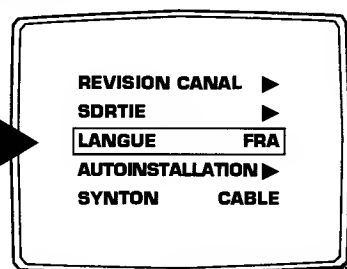 


Scroll the on-screen menu with the CH (+) or (-) buttons until the **LANGUAGE** feature appears within the highlight box. Press the VOL (+) button to choose **ENG** (English), **ESP** (Spanish), or **FRA** (French).

The **LANGUAGE** feature will only change the text within the on-screen menu.

 AUTOPROGRAM

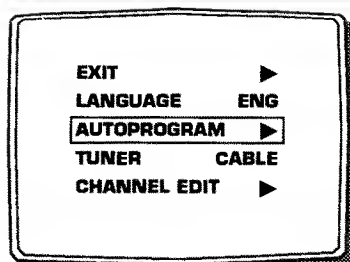


OR

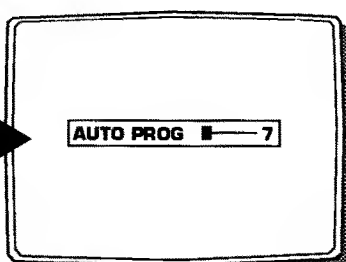 


Scroll the on-screen menu with the CH (+) or (-) buttons until the **AUTO-PROGRAM** feature appears within the highlight box. Press the VOL (+) button to automatically store all available channels into the TV's memory.

Please refer to the **TUNER** feature to make sure you have first selected whether you have **CABLE** channels or **ANTENNA** channels.

 TUNER

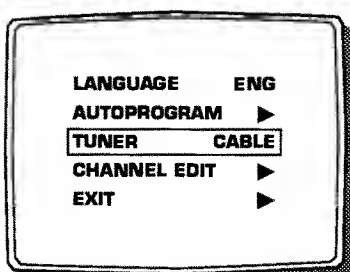


OR

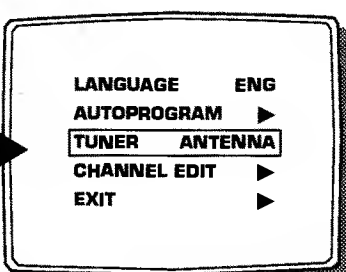 


Scroll the on-screen menu with the CH (+) or (-) buttons until the **TUNER** feature appears within the highlight box. Press the VOL (+) button to toggle between the **CABLE** or **ANTENNA** settings.

The **CABLE** setting is used with a signal coming from a cable TV company (channels 1-125 available for selection). The **ANTENNA** setting is used with an indoor or outdoor antenna (channels 2-69 available for selection).

 
CHANNEL EDIT

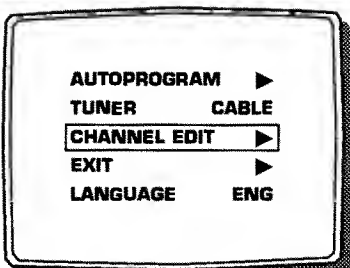

OR

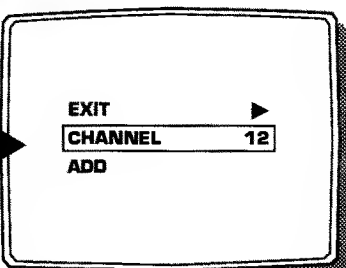 


OR

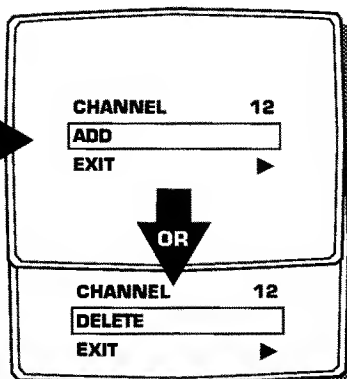 


Scroll the on-screen menu with the CH (+) or (-) buttons until the **CHANNEL EDIT** feature appears within the highlight box. Press the VOL (+) button to select the next screen. Choose the channel you want to edit with the Channel Number buttons. Scroll the on-screen menu until **ADD** or **DELETE** appears within the highlight box. The VOL (+) or (-) can be used to **ADD** or **DELETE** the channel from the TV's memory.

 EXIT

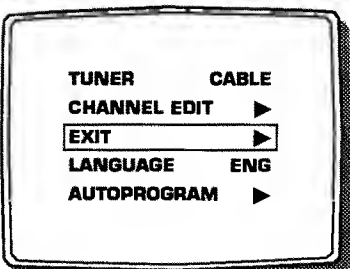

OR

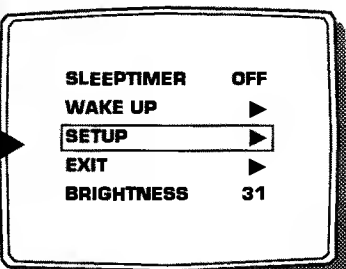 

Scroll the on-screen menu with the CH (+) or (-) buttons until the **Exit** feature appears within the highlight box. Press the VOL (+) button to return to the main on-screen menu.

Or, if you are finished making changes to the menu, press the **STATUS/EXIT** button to clear the TV's screen and return to normal viewing.

ON-SCREEN MENU CONTROLS (CONTINUED)

VOLUME

VOLUME CONTROL

Use the Volume control to set the TV's volume level on the TV screen. The Volume level or scale will be seen each time the VOLUME buttons (on the TV or remote) are pressed. (0 being the lowest, 63 being the highest.)

BEGIN

- 1 Press the MENU button on the remote, then press the CH (+) or (-) to scroll the on-screen menu until the word **VOLUME** appears within the highlight box.
- 2 Press the VOL (+) or (-) buttons to adjust the volume level.
- 3 Press STATUS/EXIT button to clear the screen.

 
STOP

SMART HELP

Try it out. Press the VOL (+) or (-) buttons. The VOLUME indicator should appear at the bottom of the screen.

NOTE: The TV's volume level can also be lowered when the set is turned OFF.

If the VOLUME LIMIT control is turned on (see below), the TV sound cannot be adjusted beyond its current settings (for example ■— 25).

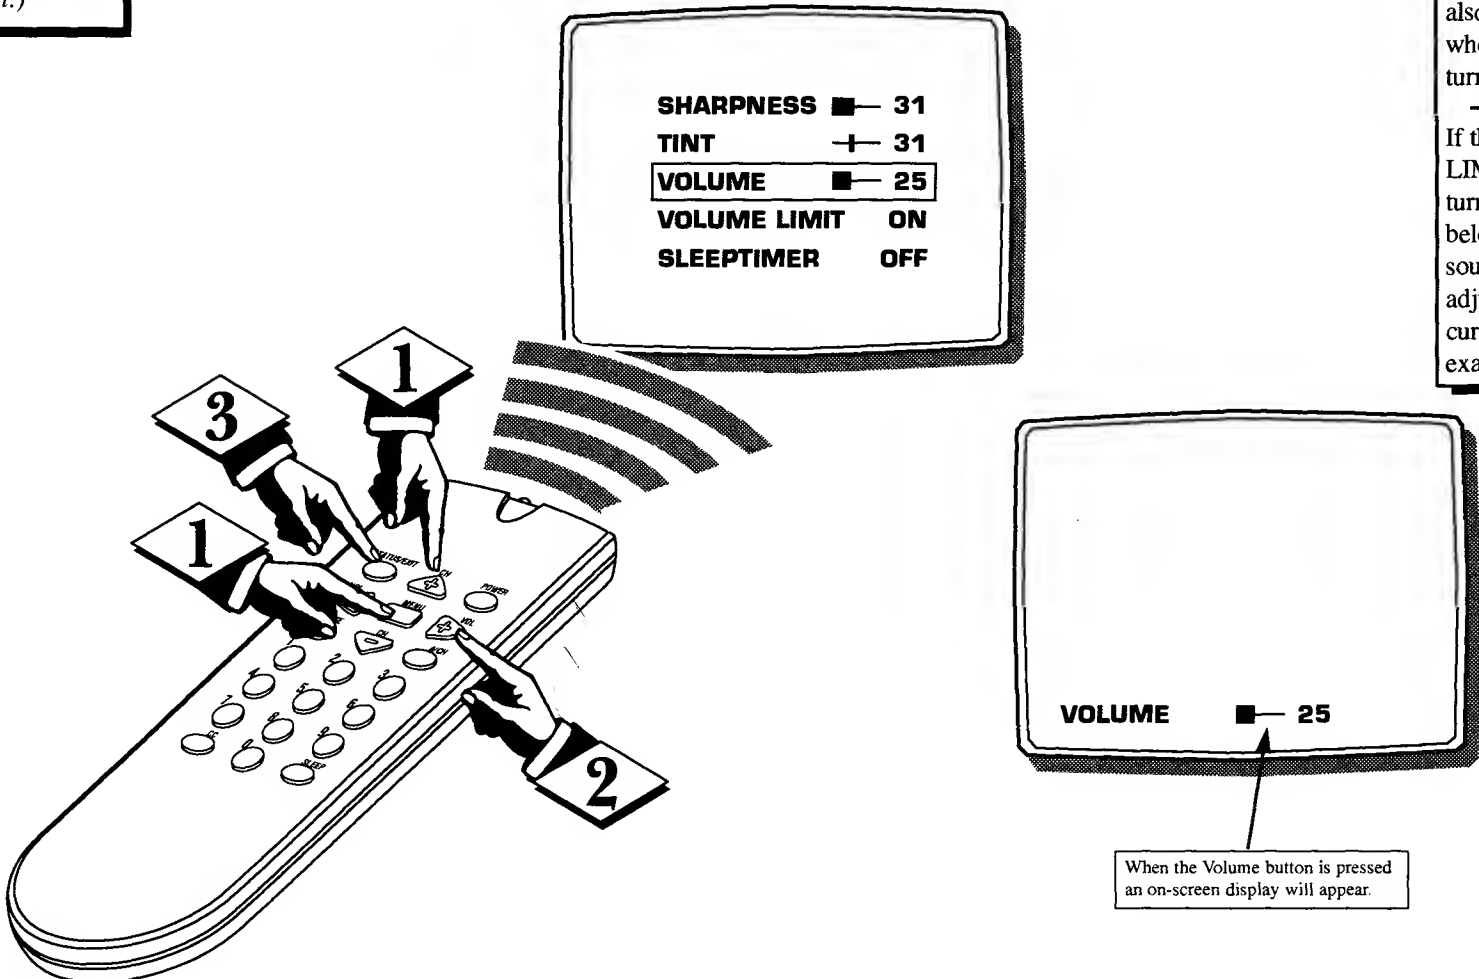

LIMITING THE VOLUME

You can limit the maximum volume level of the TV set. Once the Volume Limit control is set the TV sound cannot be played louder than the maximum preset level.

BEGIN

 
- 1 Press the MENU button on the remote, then press the CH (+) or (-) to scroll the on-screen menu until the words **VOLUME LIMIT** appears within the highlight box.
- 2 Press the VOLUME (+) or (-) button to turn the VOLUME LIMIT control ON.
- 3 Press the STATUS/EXIT button to clear the screen.

STOP

SMART HELP

Remember, the VOLUME LIMIT control (when ON) will not allow TV sound to exceed the set VOLUME level. (See VOLUME control section shown above.)

NOTE: Not all features (and drawings) discussed in this section will necessarily match those found with your television set. This is normal and does not require you contacting your dealer or requesting service.

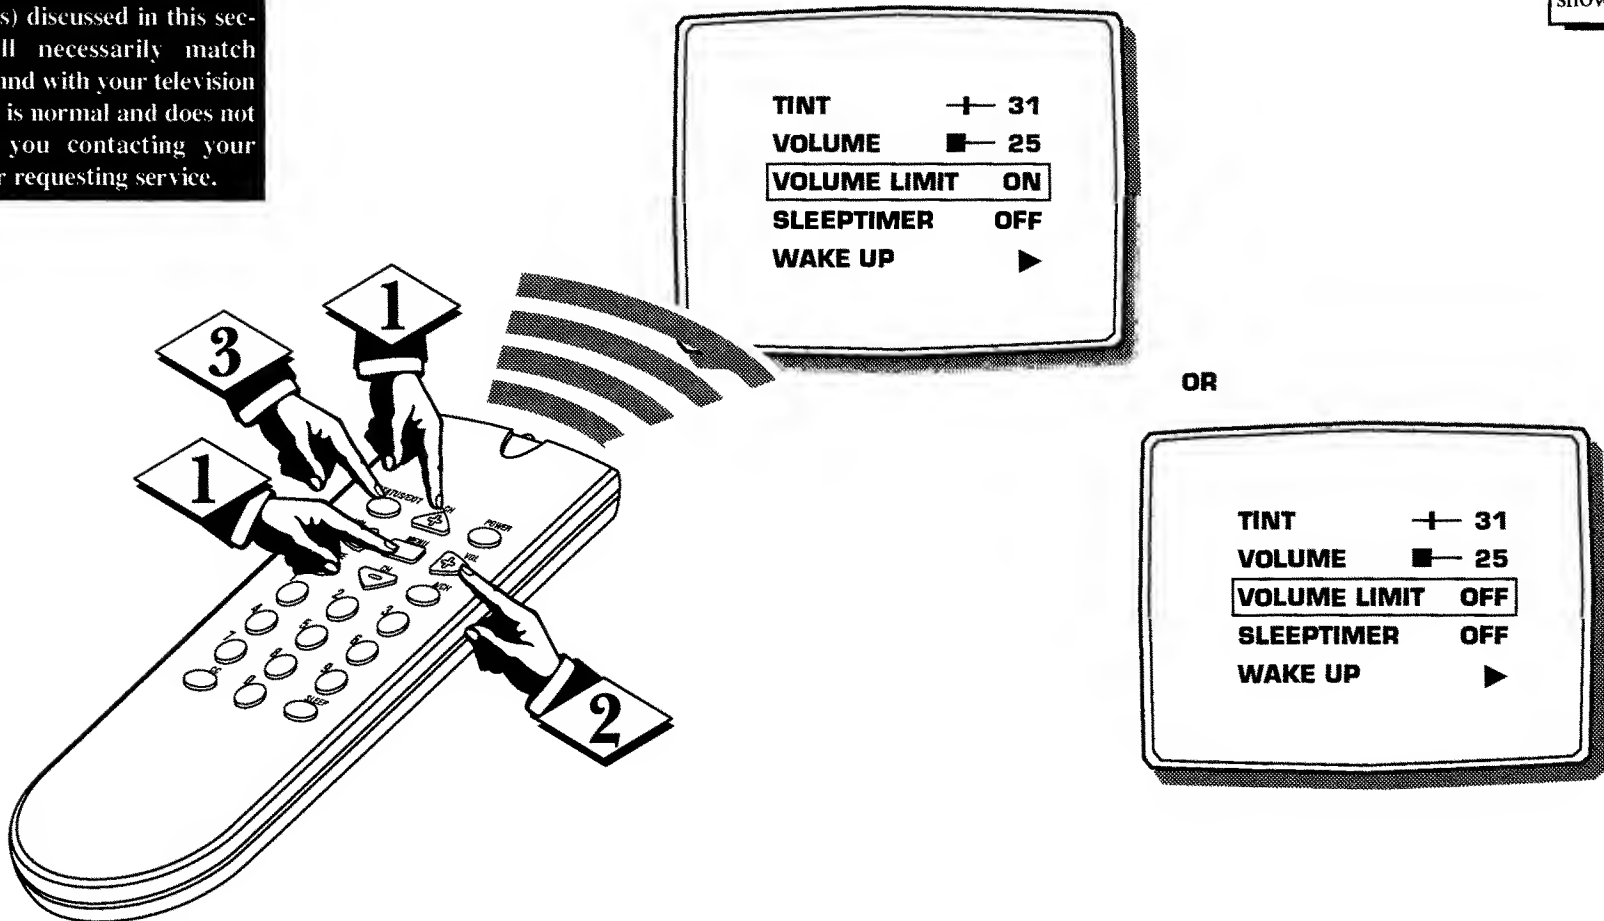

ON-SCREEN MENU CONTROLS (CONTINUED)

SLEEPTIMER

SLEEPTIMER

Have you ever fallen asleep in front of the TV only to have it wake you up at two in the morning with a test pattern screeching in your ears? Well, your TV can save you all that trouble by automatically turning itself off.

BEGIN

1 Press the **SLEEP** button on the remote.
OR
 Press the **MENU (M)** button on the remote, then press the **CH (+)** or **(-)** to scroll the on-screen menu until the word **SLEEPTIMER** appears within the highlight box.

2 Press the **SLEEP** button repeatedly to pick the amount of time (15 minutes to 2 hours ahead) before the TV will turn itself off.
OR
 The **VOL (+)** or **(-)** buttons can also be used to set the amount of time within the on-screen menu.

3 Press the **STATUS/EXIT** button to clear the screen after you have set the time for the TV to turn off.
An on-screen count down will appear during the last minute before the TV shuts itself off.

STOP

SMART HELP

 
Remember. If you ever want to see how many minutes are left before the TV shuts itself off, press the **STATUS** button on the remote.

If you want to stop a **SLEEP TIMER** setting, reset the timer back to **OFF**. You could also turn the TV off, and then back on again, to cancel a setting.

Pressing any key on the remote or TV in the last 60 seconds will cancel the **SLEEP TIMER** setting.

SLEEP TIMER control can also be set at the **MENU** in 15 minute increments up to 120 minute max (2hrs.).

During the last minute of a **SLEEP TIMER** setting an on-screen count down will be displayed.

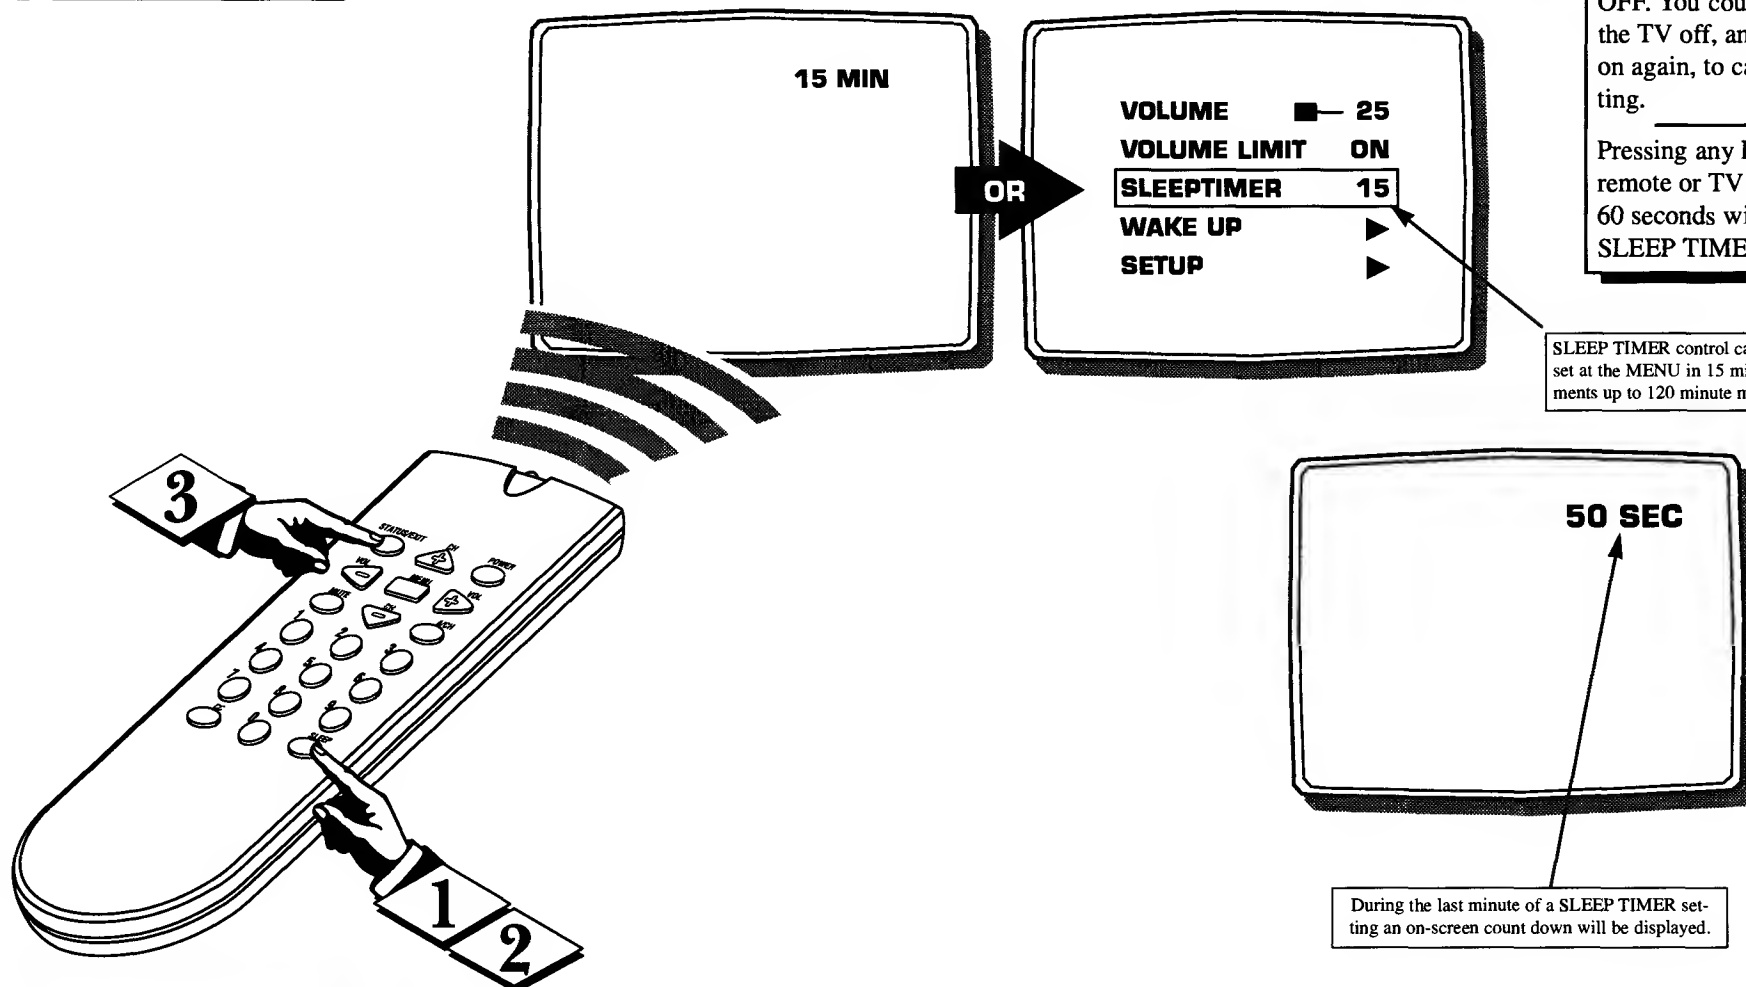

WAKE UP

WAKE UP

The WAKE UP feature can be used to power up your television within a certain time frame (such as 9 hours 55 minutes - upto an 11 hour maximum period).

BEGIN

1 Press the **MENU** button on the remote, then press the **CH (+)** or **(-)** to scroll the on-screen menu until the words **WAKE UP** appear within the highlight box.

2 Press the **VOL (+)** button to select the **WAKE UP** features; **CHANNEL**, **TIMER**, or **EXIT**.

3 Press the **CH (+)** or **(-)** buttons to scroll the on-screen menu until the desired feature is highlighted within the box.

4 Press the **NUMBER** buttons on the remote to select the channel you want the TV to turn on to (**CHANNEL** control selected). Also press the Number buttons to set the amount of time before the TV will come on (**TIMER** control selected).

Press a two digit entry for both the hours and the minutes. (Example: 1, 0, 4, 5 will appear as 10H45M within the menu.)

5 Press the **STATUS/EXIT** button on the remote to clear the screen when finished.

STOP

SMART HELP

 
Remember. If you ever want to see how many minutes are left on the **TIMER**, press the **STATUS** button on the remote.

If you want to stop a **WAKE UP TIMER** setting, reset the timer back to 00H00M.

The maximum amount of time that can be entered into the **TIMER** setting is 11 hours.

Enter the channel number you want the tv to turn to.

The maximum **TIMER** count down that can be entered for the **WAKE UP** control is 11 hours.

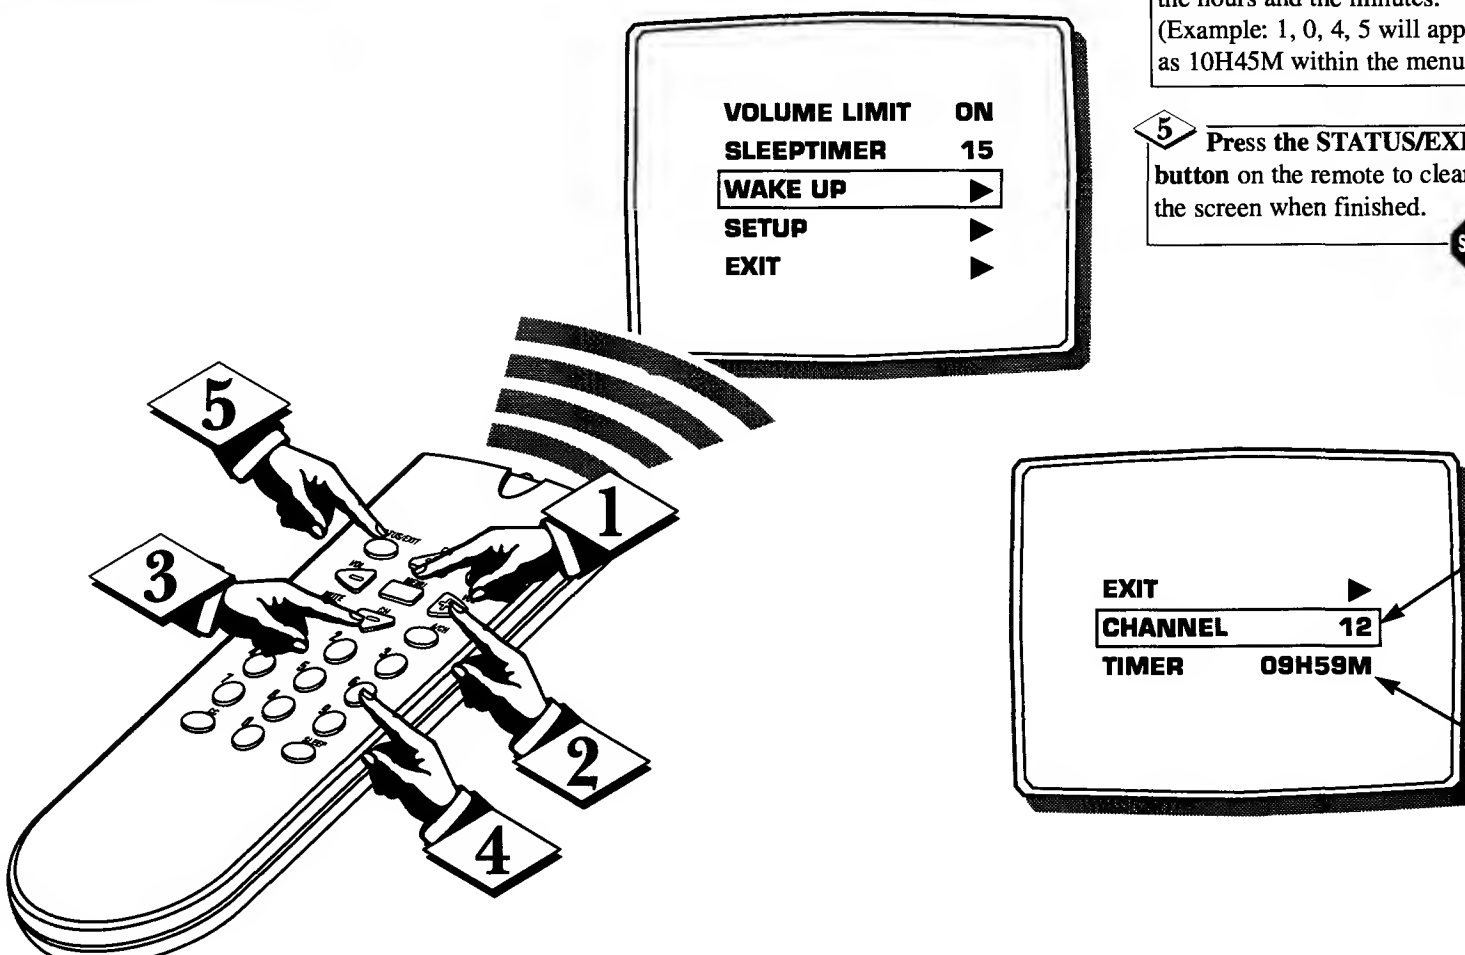

ON-SCREEN MENU CONTROLS (CONTINUED)

PICTURE

PICTURE ADJUSTMENTS

To adjust your TV picture controls, select a channel and follow the steps shown to the right.

BEGIN

1 Press the MENU button on the remote, then press the CH (+) or (-) to scroll the on-screen menu until the desired control appears within the highlight box.

 
2 Press the VOL (+) or (-) to adjust the selected picture control levels. (0 being the lowest, 63 being the highest.)

3 Press STATUS/EXIT button (or use the EXIT control in the Menu) to clear the screen when picture adjustments are completed.

STOP

SMART HELP

Remember, with the bar scale centered (or at the 30 to 33 range) the control settings are at normal mid-range levels.

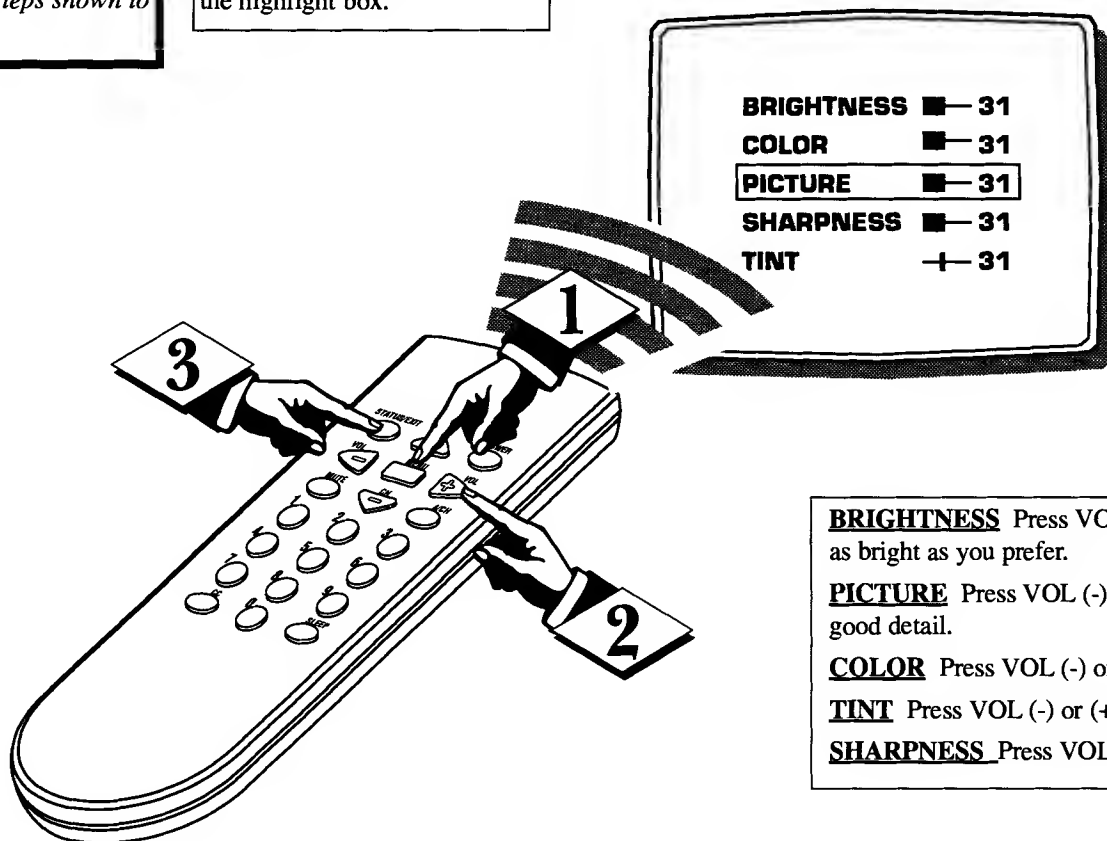

BRIGHTNESS Press VOL (-) or (+) until darkest parts of the picture are as bright as you prefer.

PICTURE Press VOL (-) or (+) until lightest parts of the picture show good detail.

COLOR Press VOL (-) or (+) to add or eliminate color.

TINT Press VOL (-) or (+) to obtain natural skin tones.

SHARPNESS Press VOL (-) or (+) to improve detail in the picture.

CAPTION

CLOSED CAPTIONING

Closed Captioning allows you to read the voice content of television programs on the TV screen. Designed to help the hearing impaired, this feature uses on-screen "text boxes" to show dialogue and conversations while the TV program is in progress. Note: Broadcast stations will often use spelling abbreviations, symbols, dropouts and other grammatical shortcuts in order to keep pace with the on-screen action. These type factors vary upon the source of the captioned text material and do not indicate a need for service on the part of the TV.

BEGIN

1 Press the CC button on the remote control repeatedly to select the Closed Captioning mode you desire (CC-1, CC-2, CC-MUTE, and CC-OFF).

Note: Usually "CC-1" is the most used mode to view captioned material.

 
2 Press the STATUS button after making your Caption mode selection. The TV display will clear and Captioning material (if available on the currently selected TV program) will appear on the TV screen. To cancel, set the CAPTION feature to CC-OFF when finished viewing.

STOP

SMART HELP

Remember, not all TV programs and product commercials are made for broadcast with Closed Caption (CC) information included. Neither are all Closed Caption modes (CC-1 or CC-2) necessarily being used by a broadcast station during the transmission of a closed caption program. Refer to your area's TV program listings for the stations and times of Closed Caption shows.

This symbol will appear with channels that contain Closed Captioning material.

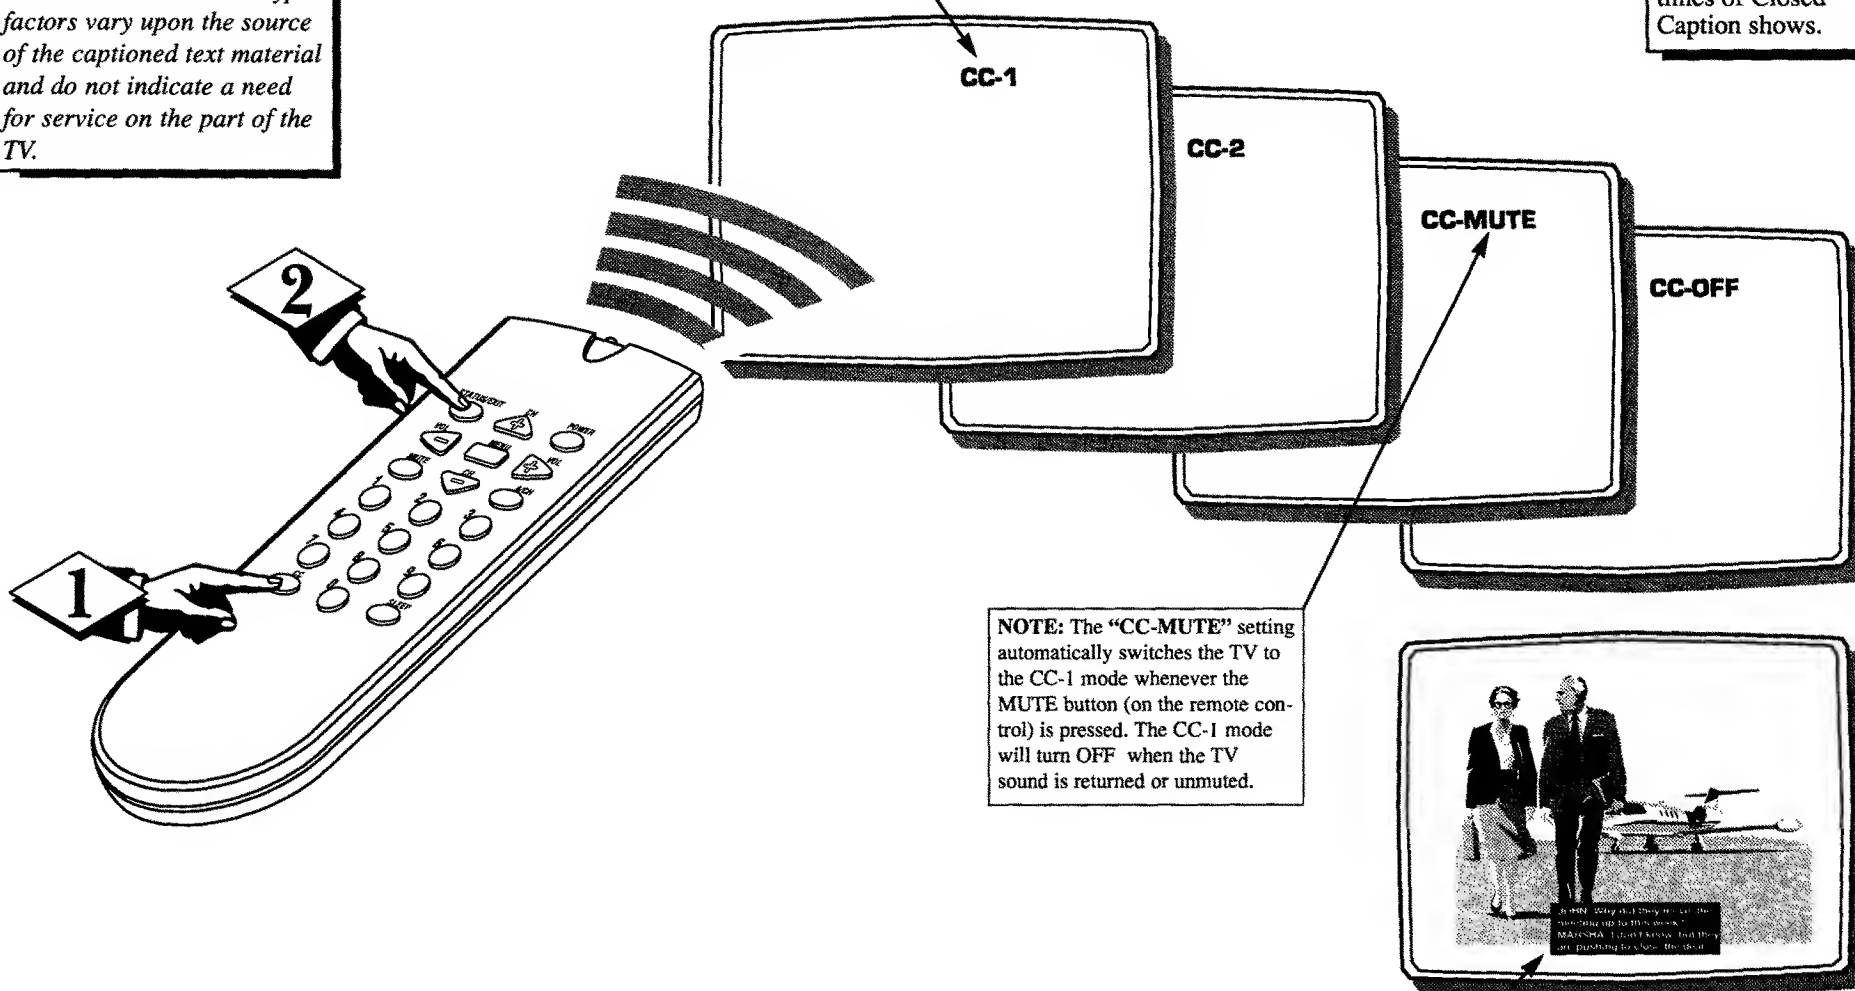

NOTE: The "CC-MUTE" setting automatically switches the TV to the CC-1 mode whenever the MUTE button (on the remote control) is pressed. The CC-1 mode will turn OFF when the TV sound is returned or unmuted.

CC-1 or CC-2 mode: dialogue (and descriptions) for the action on the captioned TV program shows on-screen. (See Smart Help on this page.)

GENERAL INFORMATION

TIPS

TROUBLESHOOTING

Please make these simple checks before calling for service. These tips can save you time and money since charges for TV installation and adjustment of customer controls are not covered under your warranty.

CAUTION: A video source (such as a video game, Compact Disc Interactive - CDI, or TV information channel) which shows a constant non-moving pattern on the TV screen, can cause picture tube damage. When not in use, turn the video source OFF. Regularly alternate the use of such video sources with normal TV viewing.

BEGIN

1

No Power

- Check the TV power cord. Unplug the TV, wait 1 minute, then reinsert plug into outlet and push POWER button again.
- Check to be sure outlet is not on a wall switch.
- This TV is equipped with protective circuitry that shuts the TV off in case of moderate power surges. Should this occur turn the TV back on by pressing the POWER button once or twice, or unplug (wait 10 seconds) and then replug the power cord at the AC outlet. This feature is NOT designed to prevent damage due to high power surges such as those caused by lightning, which is not covered by your warranty.

2

No Sound

- Check the VOLUME buttons.
- Check the MUTE button on the remote control.

3

No Picture

- Check the TUNER/ ANTENNA CABLE control for correct position.
- Check antenna connections on the rear of the TV. Are they properly secured to the antenna plug on the TV?

4

Remote Doesn't Work

- Check batteries. Replace with AAA Heavy Duty (Zinc Chloride) or Alkaline batteries if necessary.
- Clean the remote and the remote sensor window on the TV.
- Check the TV power cord. Unplug the TV, wait 1 minute, then reinsert plug into outlet and push POWER button again.

5

Wrong Channel (or no Channels above 13)

- Repeat channel selection.
- Add desired channel numbers (CHANNEL control) into TV memory.
- Check TUNER/ ANTENNA CABLE control for correct position.

STOP

Cleaning and Care

- Unplug the TV before cleaning.
- Avoid using anything abrasive that could scratch the screen.
- Wipe the TV screen with a clean cloth dampened with water.
- Gently wipe cabinet surfaces with a clean cloth or sponge dampened with cool clear water. Use a clean dry cloth to dry the wiped surfaces.
- Occasionally vacuum the ventilation holes or slots in the cabinet back.
- Never use thinners, insecticide sprays, or other chemicals on or near the cabinet.

INDEX

Accessories2
Add Channels4
Antenna/Cable Connections .2
Autoprogram4
Batteries3
Cable TV Control4
Channel Memory4

Closed Caption7
Coaxial Cable2
Controls/TV3
Controls/Remote3
Display3
Features1
First Time Use4

Language4
Menu Button3
Minus(-) Buttons3
Picture Adjustments7
Plus(+) Button3
Precautions1, 8
Programming4

Remote Control3
RF Cable2
Safety Notes1
Service8
Sensor Remote3
SETUP4
Sleep Timer6

Status Button3
Tips for Service8
VCR Connections2
Volume Control5
Volume Limit Control ...5
Wake Up Control6
Warranty8

WARRANTY

COLOR TELEVISION

90 Days Free Labor

One Year Free Replacement of Parts (Two Years Free Replacement on Color Picture Tube)

This product must be carried-in for repair.

WHO IS COVERED?

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase.

WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For 90 days thereafter, all parts will be repaired or replaced free, and labor is free. From 90 days to one year from the day of purchase, all parts will be repaired or replaced free, but you pay for all labor charges. From one to two years from the day of purchase, you pay for the replacement or repair of all parts except the picture tube, and for all labor charges. After two years from the day of purchase, you pay for the replacement or repair of all parts, and for all labor charges.

All parts, including repaired and replaced parts, are covered only for the original warranty period. When the warranty on the product expires, the warranty on all replaced and repaired parts also expires.

WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- a product used for commercial or institutional purposes.

WHERE IS SERVICE AVAILABLE?

Warranty service is available in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide service (although there may be a delay if the appropriate spare parts and technical manual(s) are not readily available).

MAKE SURE YOU KEEP...

Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product.

BEFORE REQUESTING SERVICE...

Please check your owner's manual before requesting service. Adjustments of the controls discussed there may save you a service call.

TO GET WARRANTY SERVICE IN U.S.A., PUERTO RICO OR U.S. VIRGIN ISLANDS...

Contact a Philips factory service center (see enclosed list) or authorized service center to arrange repair.

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

TO GET WARRANTY SERVICE IN CANADA...

Please contact Philips at:

1-800-661-6162 (French Speaking)
1-800-363-7278 (English Speaking)

(In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Philips is not liable under any circumstances for any direct, indirect, special, incidental or consequential damages, howsoever incurred, even if notified of the possibility of such damages.)

REMEMBER...

Please record the model and serial numbers found on the product below. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # _____

SERIAL # _____

Philips Service Company, P.O. Box 555, Jefferson City, Tennessee 37760
(423) 475-8869